



- **General Instructions:** This Install Requires 1 Technician Approximately 20 Minutes to Complete
- **Power Requirements:** None
- **Required Tools:** Phillips Screwdriver, 5/32 Allen Wrench, Power Drill, 6mm Drill Bit

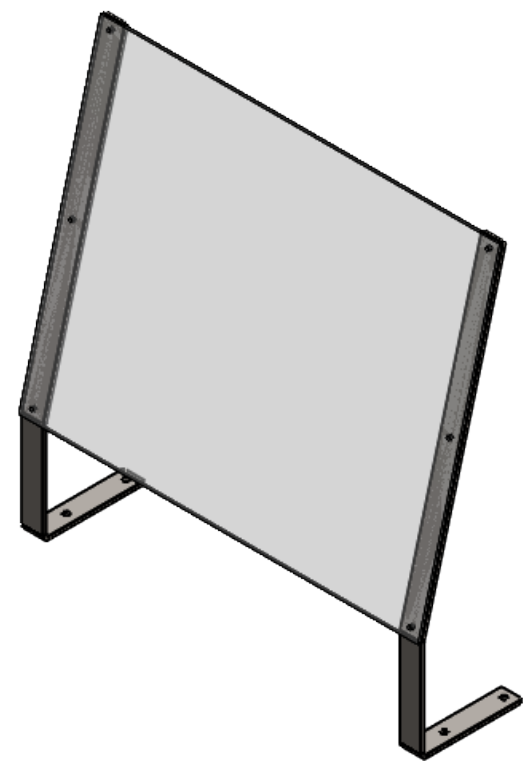


Install Method 1: Tape (See Sheet 3)
Install Method 2: Wood Top (See Sheet 4)
Install Method 3: Stone Top (Find Stone Installer to Install Sneeze Guard)


PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CREATIVE SURFACES INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CREATIVE SURFACES INC IS PROHIBITED.

TOLERANCES UNLESS OTHERWISE SPECIFIED: DECI .X ± .030 ANGLE ± 0.5 .XX ± .010 FRACT ± 1/64 .XXX ± .005 ALL WIRE LENGTHS NOMINAL ± .5"		NAME	DATE	 casework signs countertops
INTERPRET GEOMETRIC TOLERANCING PER:		SALES		
MATERIAL		DRAWN BY	patrick.allen 4/28/2020	
FINISH		LAST UPDATED	patrick.allen 4/28/2020	SIZE B PART NO. 05-00620-041-01 and 05-00620-051-01-Install THEME
DO NOT SCALE DRAWING		TITLE: SNEEZE GUARD		

05-00620-041-01

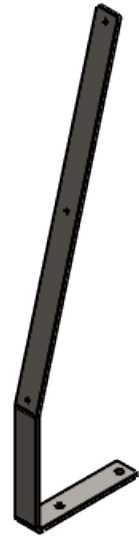


08-00620-032-00
Sneeze Guard
Frame
Qty 2

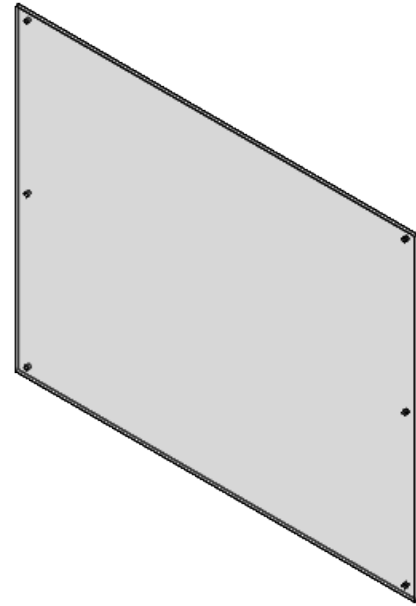


08-00620-036-01
Sneeze Guard
Acrylic Face
Qty 1

05-00620-051-01

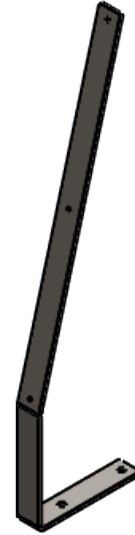


08-00620-032-00
Sneeze Guard
Frame
Qty 2

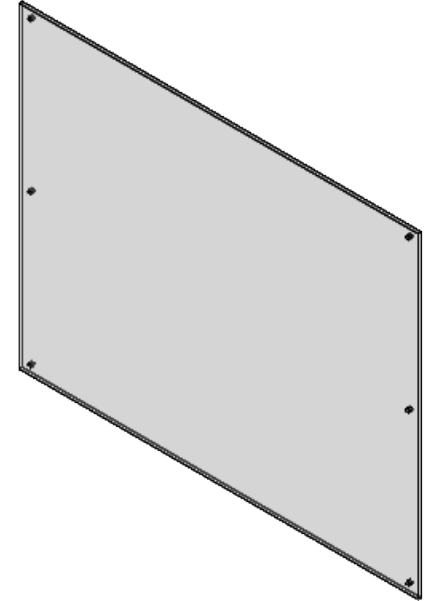

08-00620-056-01
Sneeze Guard
Polycarbonate Face
Qty 1


Hardware Kit
70-00620-001-00 QTY 1

Hardware Kit
70-00620-001-00 QTY 1

TOLERANCES UNLESS OTHERWISE SPECIFIED: DECI .X ± .030 ANGLE ± 0.5 .XX ± .010 FRACT ± 1/64 .XXX ± .005 ALL WIRE LENGTHS NOMINAL ± .5"	NAME	DATE	 casework signs countertops
	SALES		
	DRAWN BY	patrick.allen 4/28/2020	
	LAST UPDATED	patrick.allen 4/28/2020	
INTERPRET GEOMETRIC TOLERANCING PER: MATERIAL FINISH DO NOT SCALE DRAWING	TITLE: SNEEZE GUARD		SIZE B
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CREATIVE SURFACES INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CREATIVE SURFACES INC IS PROHIBITED.			PART NO. 05-00620-041-01 and 05-00620-051-01-Install
SCALE: 1:8		WEIGHT:	SHEET 2 OF 4

Assembly (Tape)

1) Install the (2) Frames to the Face Using (3) #6-32x1/2" Black Pan Head Machine Screws per Frame

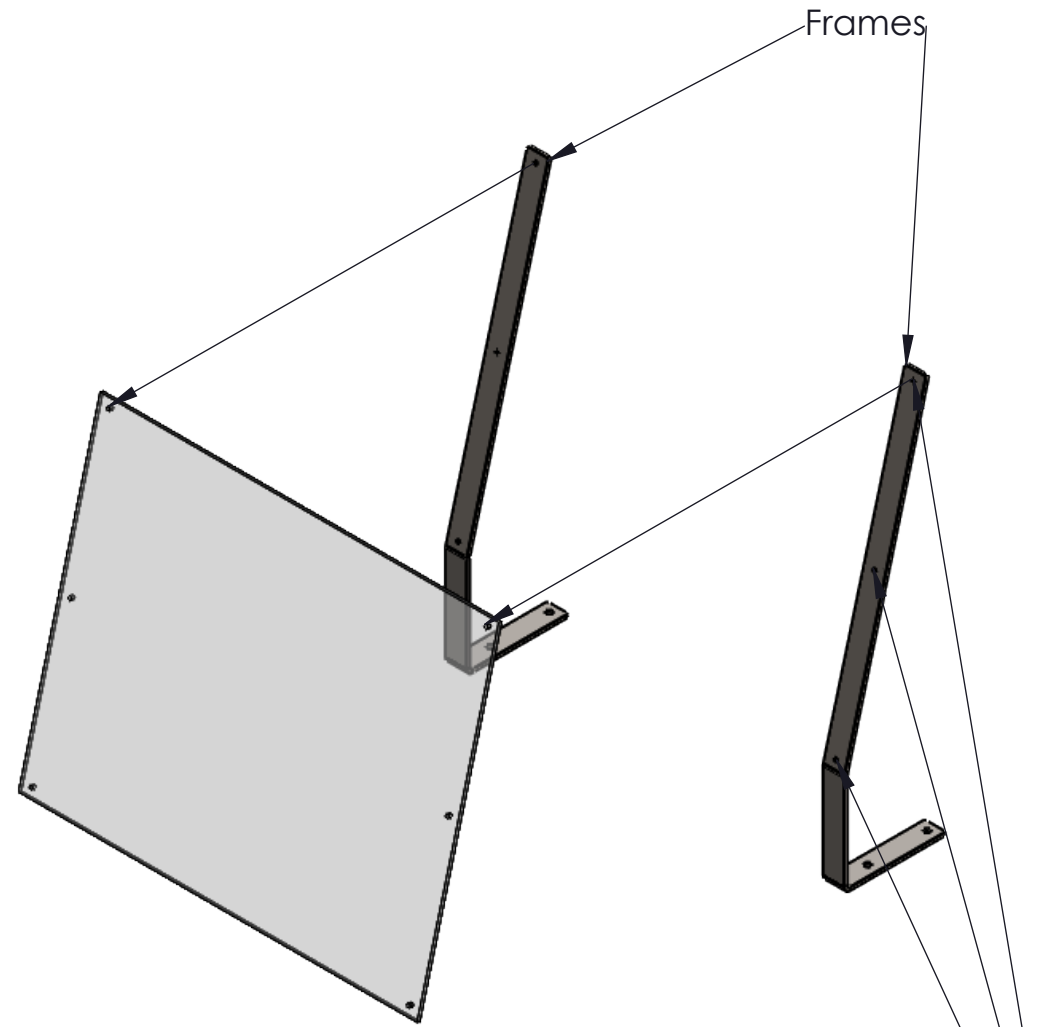



(3) #6-32x1/2" Black Pan Head Machine Screws

2) Install the Sneeze Guard by Performing the Following:

2.1) Remove the Protective Liner on the Double Sided Tape

2.1) Place the Sneeze Guard at the Desired Location and Press the Frame Down Firmly

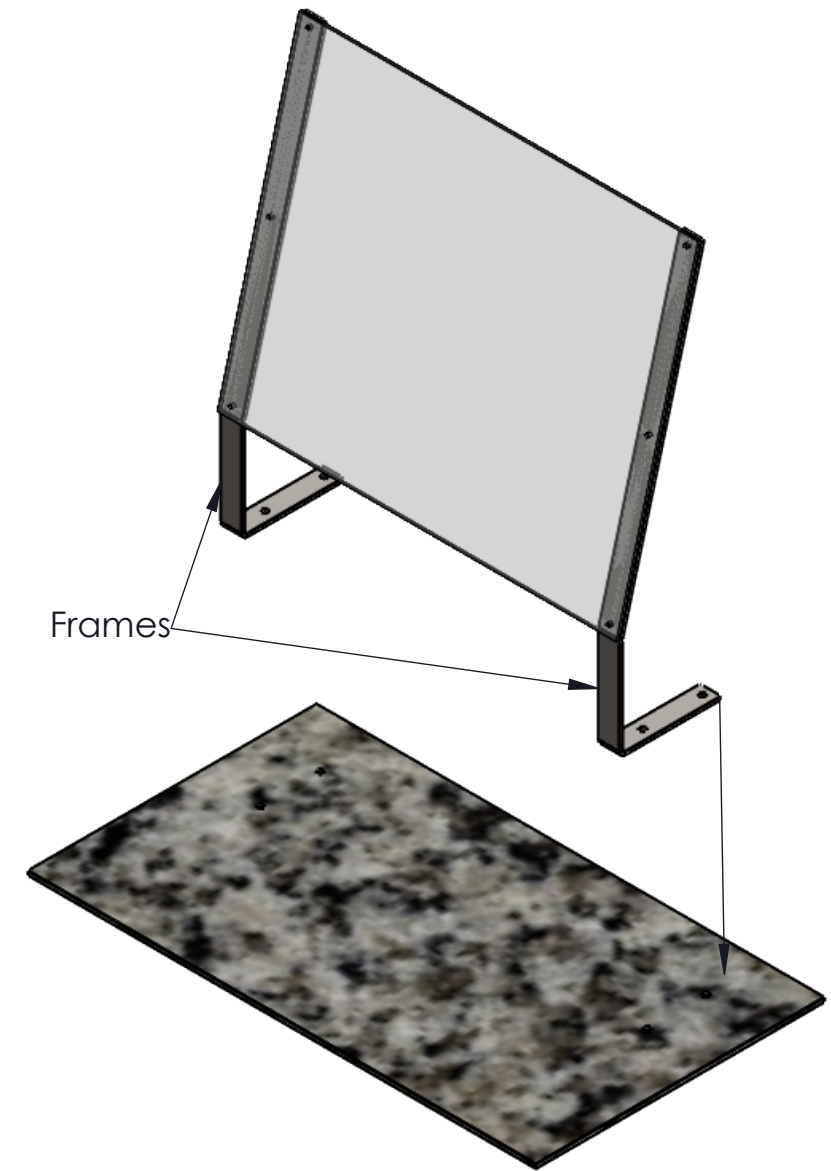


TOLERANCES UNLESS OTHERWISE SPECIFIED: DECI .X ± .030 ANGLE ± 0.5 .XX ± .010 FRACT ± 1/64 .XXX ± .005 ALL WIRE LENGTHS NOMINAL ± .5"		NAME	DATE	 casework signs countertops
INTERPRET GEOMETRIC TOLERANCING PER:		SALES		
MATERIAL		DRAWN BY	patrick.allen 4/28/2020	
FINISH		LAST UPDATED	patrick.allen 4/28/2020	
DO NOT SCALE DRAWING		TITLE: SNEEZE GUARD		SIZE B PART NO. 05-00620-041-01 and 05-00620-051-01-Install SCALE: 1:8 WEIGHT: SHEET 3 OF 4

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CREATIVE SURFACES INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CREATIVE SURFACES INC IS PROHIBITED.

Assembly (Wood Top)

1) Install the (2) Frames to the Face Using (3) #6-32x1/2" Black Pan Head Machine Screws per Frame

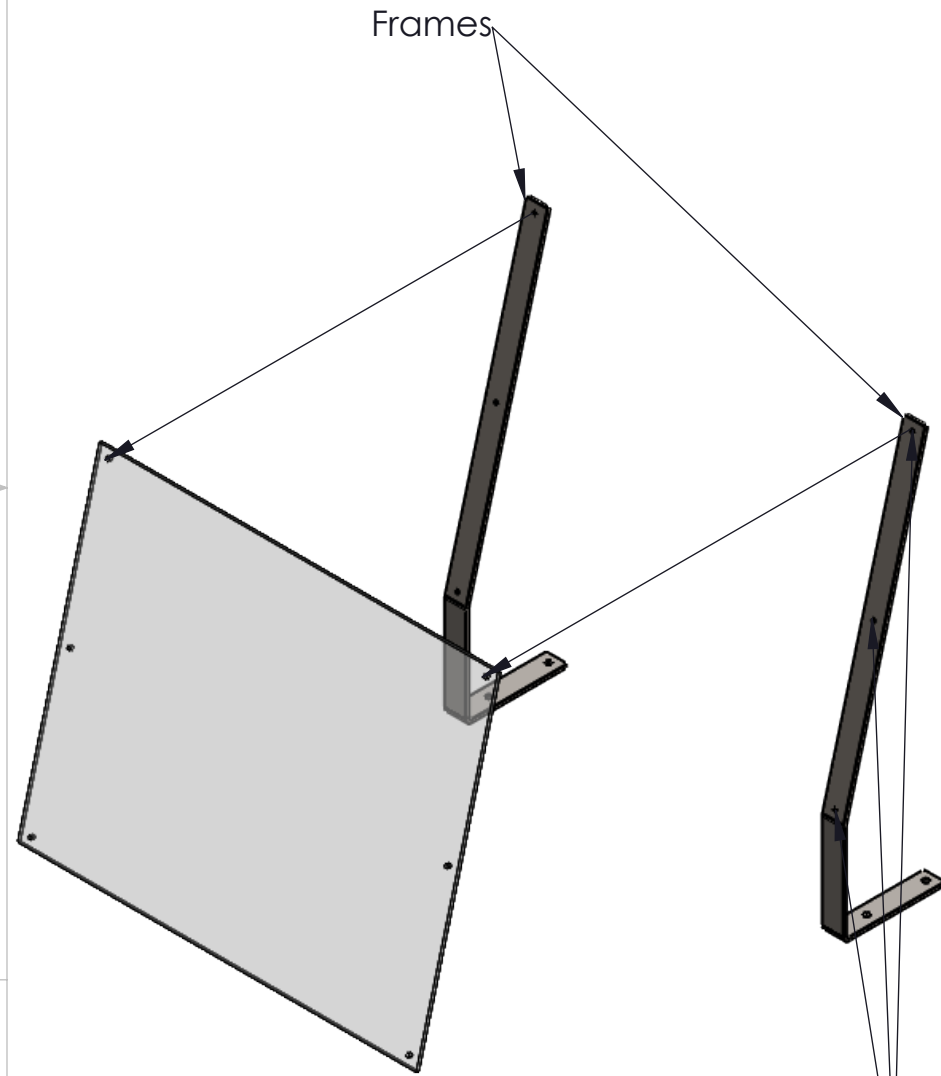


(3) #6-32x1/2" Black Pan Head Machine Screws

2) Install the E-Z Hex Flush 8-32x10mm Threaded Insert (PN: 800832-10) to the Counter by Performing the Following:

2.1) Place the Sneeze Guard at the Desired Location

2.2) Mark the (2) Mounting Locations per Frame and Remove the Sneeze Guard

2.3) Drill (2) 6mm Holes into the Counter and Install the (2) E-Z Hex Flush 8-32x10mm Threaded Inserts (PN: 800832-10) per Frame Using a 5/32 Allen Wrench

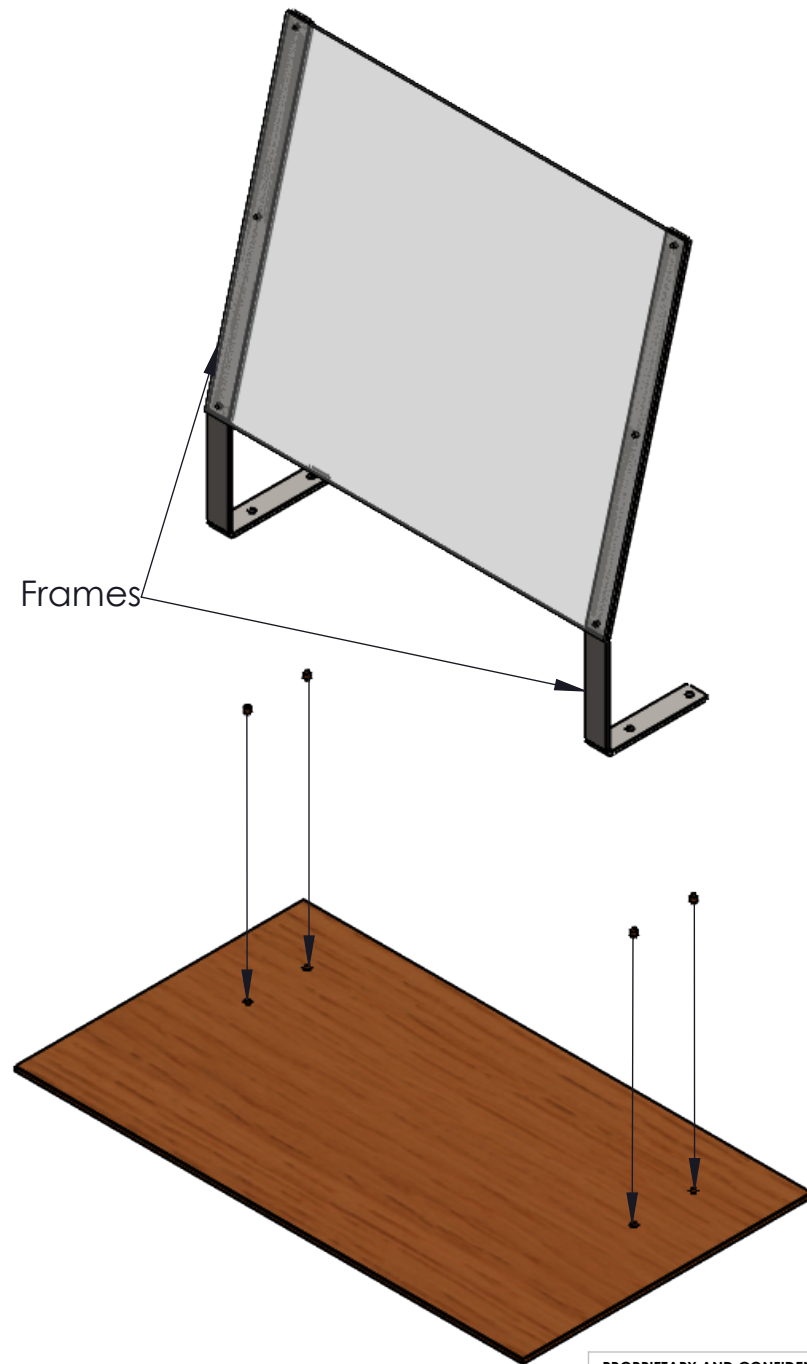


(2) #8-32x1/2" Black Pan Head Machine Screws

3) Install the Sneeze Guard to the E-Z Hex Flush 8-32x10mm Threaded Inserts (PN: 800832-10) by Performing the Following:

3.1) Remove the Protective Liner on the Double Sided Tape

3.2) Place the Sneeze Guard at the Desired Location and Press the Frame Down Firmly

3.3) Install the Frame to the E-Z Hex Flush 8-32x10mm Threaded Inserts (PN: 800832-10) Using (2) #8-32x1/2" Black Pan Head Machine Screws per Frame

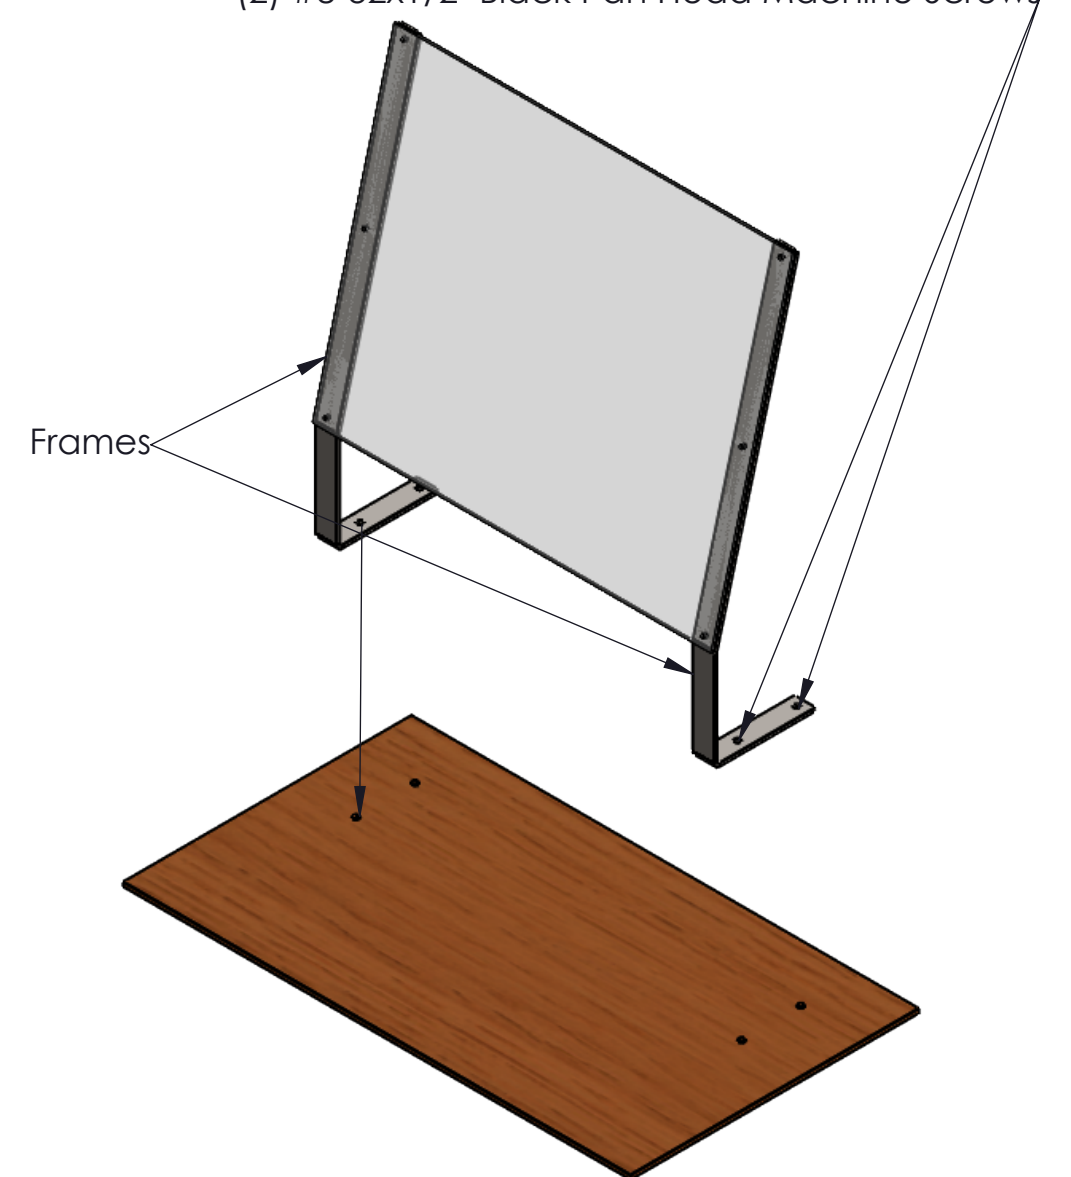

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CREATIVE SURFACES INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CREATIVE SURFACES INC IS PROHIBITED.

TOLERANCES		NAME	DATE
UNLESS OTHERWISE SPECIFIED:			
DECI .X ± .030	ANGLE ± 0.5	SALES	
.XX ± .010	FRACT ± 1/64	DRAWN BY	patrick.allen 4/28/2020
.XXX ± .005		LAST UPDATED	patrick.allen 4/28/2020
ALL WIRE LENGTHS NOMINAL ± .5"			
INTERPRET GEOMETRIC TOLERANCING PER:		TITLE:	
MATERIAL		SNEEZE GUARD	
FINISH		SIZE	
DO NOT SCALE DRAWING		PART NO.	
		05-00620-041-01 and 05-00620-051-01-Install	
		THEME	
		SCALE: 1:8	
		WEIGHT:	
		SHEET 4 OF 4	

