

D

D

C

C


B

B

A

A

- **General Instructions:** This Install Requires 1 Technician Approximately 20 Minutes to Complete
- **Power Requirements:** None
- **Required Tools:** Phillips Screwdriver, 5/32 Allen Wrench, Power Drill, 6mm Drill Bit

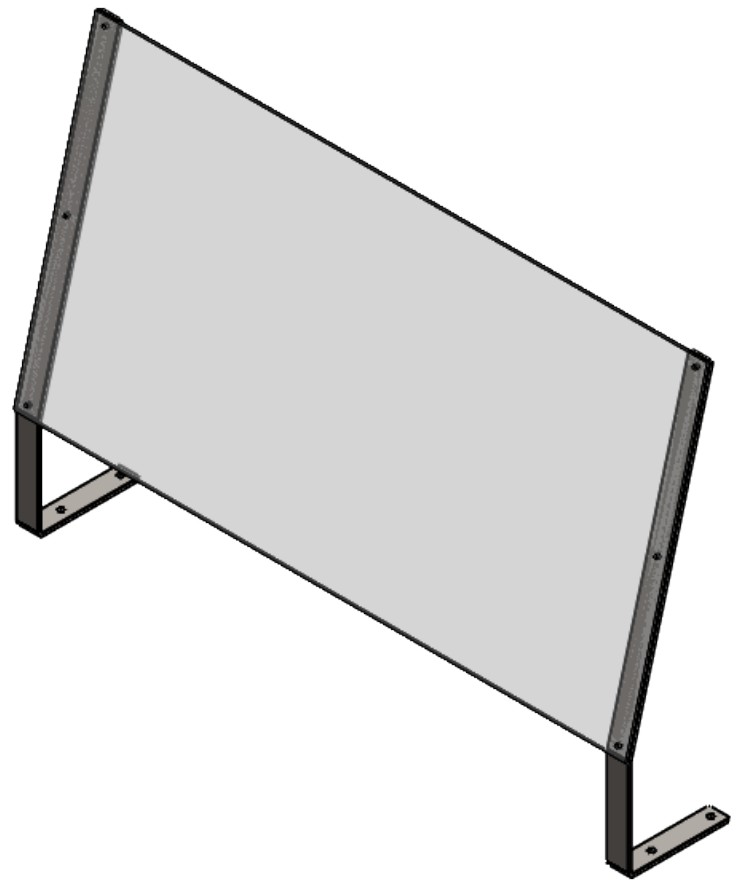

Install Method 1: Tape (See Sheet 3)
Install Method 2: Wood Top (See Sheet 4)
Install Method 3: Stone Top (Find Stone Installer to Install Sneeze Guard)

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CREATIVE SURFACES INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CREATIVE SURFACES INC IS PROHIBITED.

TOLERANCES
 UNLESS OTHERWISE SPECIFIED:
 DECI .X ± .030 ANGLE ± 0.5
 .XX ± .010 FRACT ± 1/64
 .XXX ± .005
 ALL WIRE LENGTHS NOMINAL ± .5"

INTERPRET GEOMETRIC TOLERANCING PER:
 MATERIAL
 FINISH
 DO NOT SCALE DRAWING

	NAME	DATE
SALES		
DRAWN BY	patrick.allen	4/28/2020
LAST UPDATED	patrick.allen	4/28/2020





TITLE:
SNEEZE GUARD



SIZE	PART NO.	THEME
B	05-00620-042-00 and 05-00620-052-00-Install	
SCALE: 1:8	WEIGHT:	SHEET 1 OF 4

05-00620-042-00

05-00620-052-00

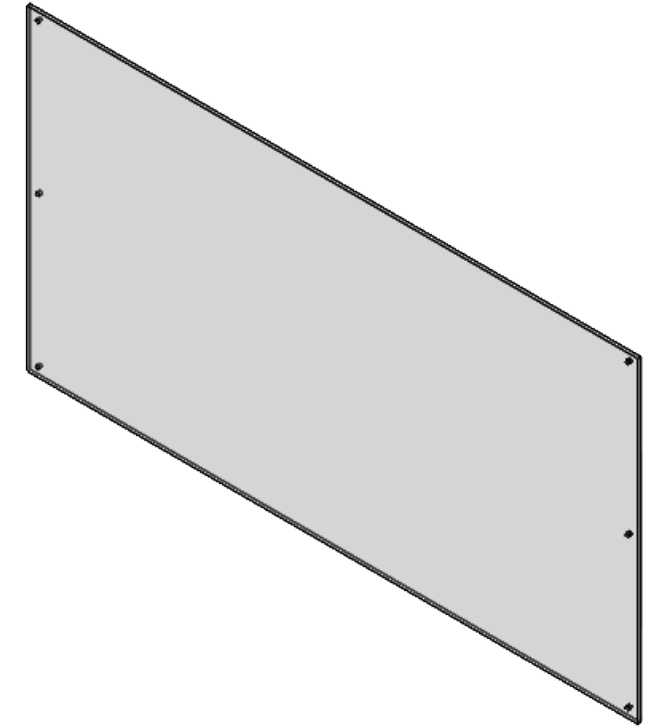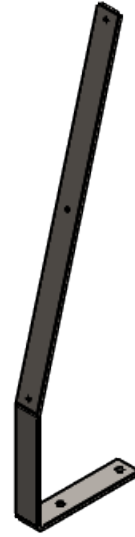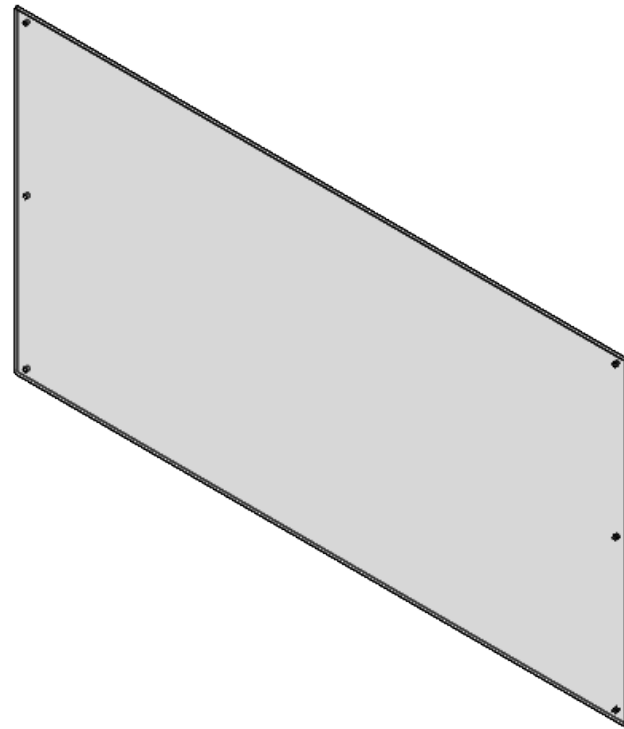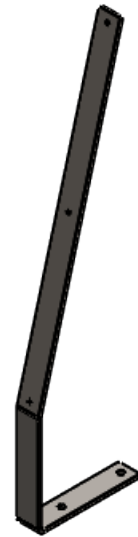

08-00620-032-00
Sneeze Guard
Frame
Qty 2

08-00620-037-00
Sneeze Guard
Acrylic Face
Qty 1

08-00620-032-00
Sneeze Guard
Frame
Qty 2

08-00620-057-00
Sneeze Guard
Polycarbonate Face
Qty 1

Hardware Kit

70-00620-001-00 QTY 1

Hardware Kit

70-00620-001-00 QTY 1

TOLERANCES		NAME	DATE
UNLESS OTHERWISE SPECIFIED:		SALES	
DECI .X ± .030	ANGLE ± 0.5	DRAWN BY	patrick.allen 4/28/2020
.XX ± .010	FRACT ± 1/64	LAST UPDATED	patrick.allen 4/28/2020
.XXX ± .005			
ALL WIRE LENGTHS NOMINAL ± .5"			
INTERPRET GEOMETRIC TOLERANCING PER:		TITLE:	
MATERIAL		SNEEZE GUARD	
FINISH		SIZE	
DO NOT SCALE DRAWING		PART NO.	
		05-00620-042-00 and 05-00620-052-00-Install	
		THEME	
		SCALE: 1:8	
		WEIGHT:	
		SHEET 2 OF 4	


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CREATIVE SURFACES INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CREATIVE SURFACES INC IS PROHIBITED.



70-00620-001-00 QTY 1

Assembly (Tape)

1) Install the (2) Frames to the Face Using (3) #6-32x1/2" Black Pan Head Machine Screws per Frame

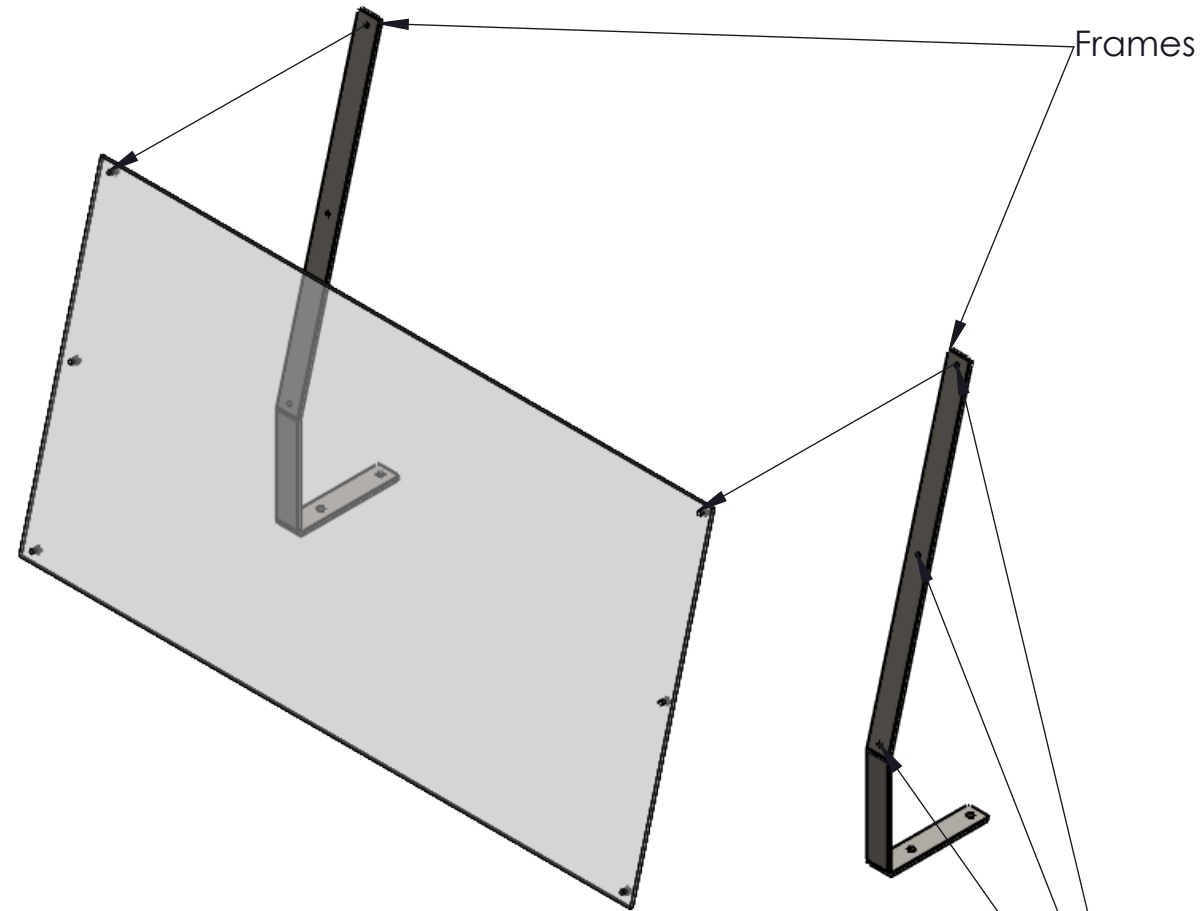


(3) #6-32x1/2" Black Pan Head Machine Screws

2) Install the Sneeze Guard by Performing the Following:

2.1) Remove the Protective Liner on the Double Sided Tape

2.1) Place the Sneeze Guard at the Desired Location and Press the Frame Down Firmly

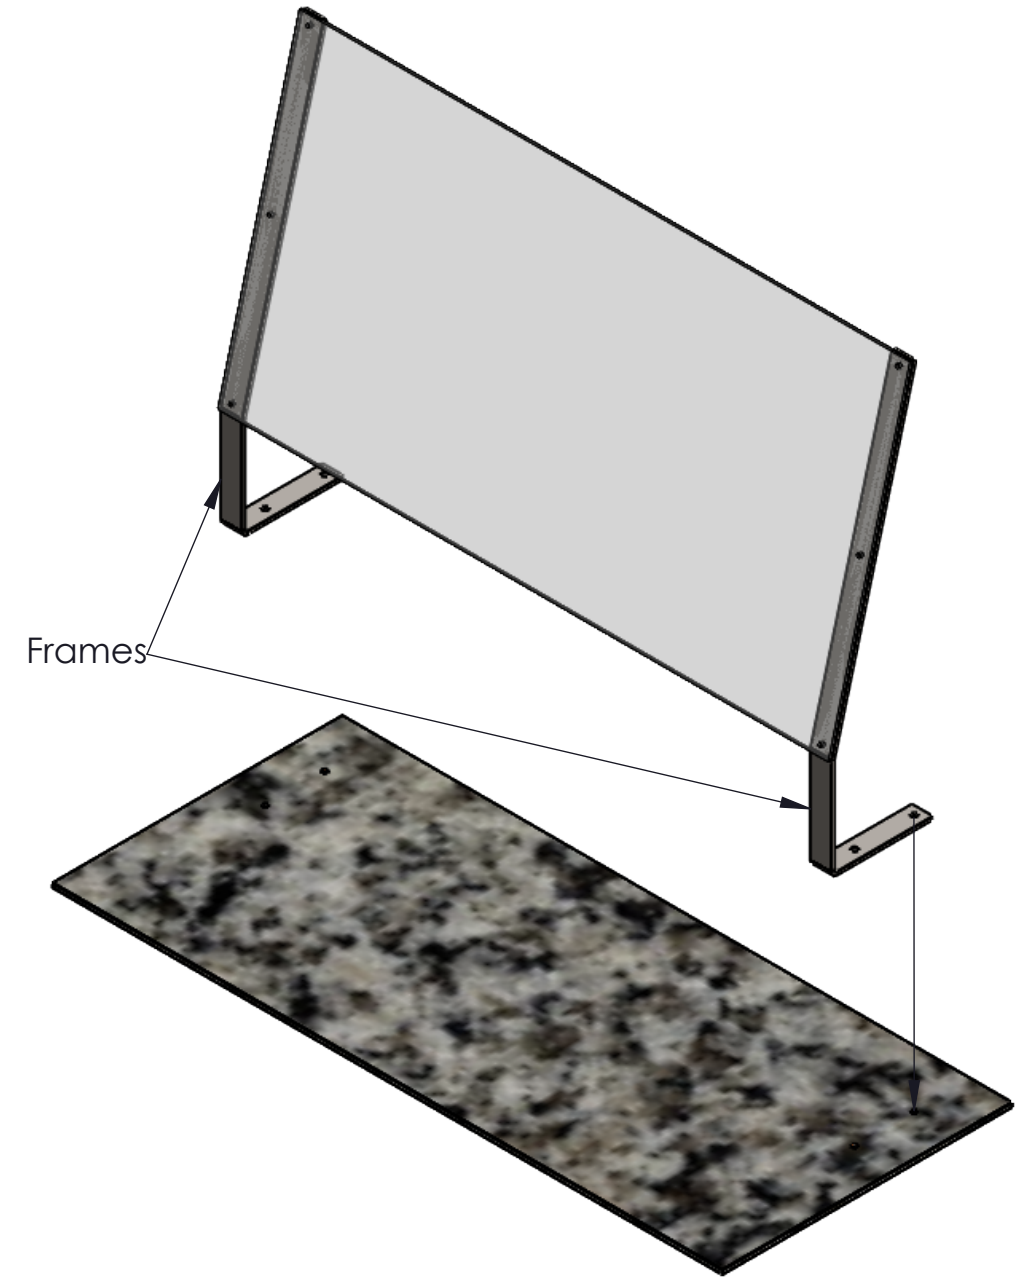


TOLERANCES		NAME	DATE
UNLESS OTHERWISE SPECIFIED:			
DECI .X ± .030	ANGLE ± 0.5	SALES	
.XX ± .010	FRACT ± 1/64	DRAWN BY	patrick.allen 4/28/2020
.XXX ± .005		LAST UPDATED	patrick.allen 4/28/2020
ALL WIRE LENGTHS NOMINAL ± .5"			
INTERPRET GEOMETRIC TOLERANCING PER:		TITLE:	
MATERIAL		SNEEZE GUARD	
FINISH		SIZE	
DO NOT SCALE DRAWING		PART NO.	
		05-00620-042-00 and 05-00620-052-00-Install	
		THEME	
		SCALE: 1:8 WEIGHT: SHEET 3 OF 4	

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CREATIVE SURFACES INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CREATIVE SURFACES INC IS PROHIBITED.



Assembly (Wood Top)

1) Install the (2) Frames to the Face Using (3) #6-32x1/2" Black Pan Head Machine Screws per Frame

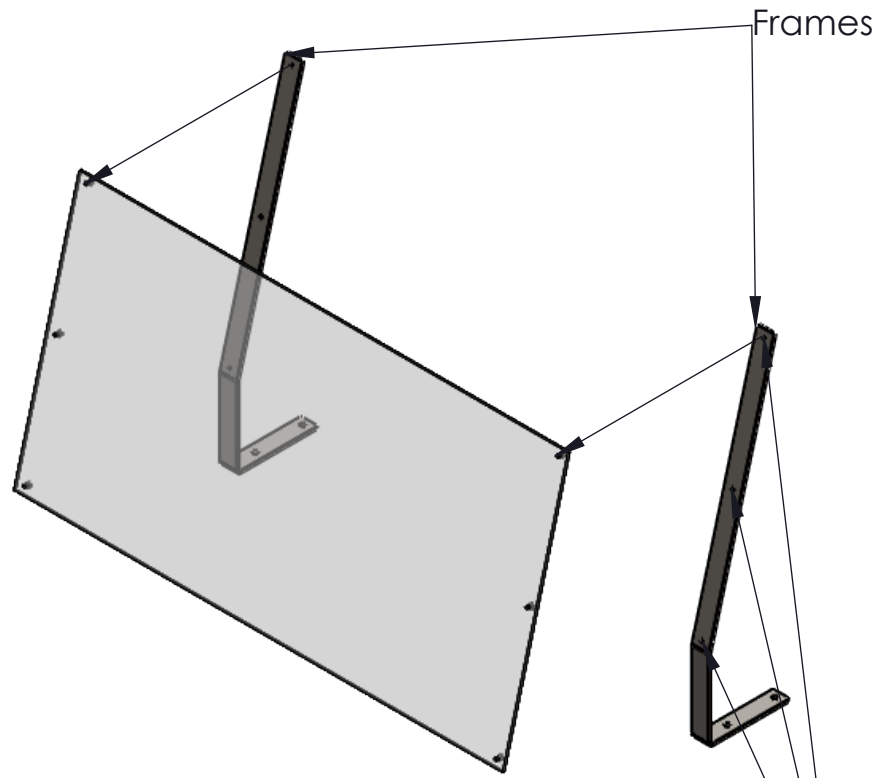


(3) #6-32x1/2" Black Pan Head Machine Screws

2) Install the E-Z Hex Flush 8-32x10mm Threaded Insert (PN: 800832-10) to the Counter by Performing the Following:

2.1) Place the Sneeze Guard at the Desired Location

2.2) Mark the (2) Mounting Locations per Frame and Remove the Sneeze Guard

2.3) Drill (2) 6mm Holes into the Counter and Install the (2) E-Z Hex Flush 8-32x10mm Threaded Inserts (PN: 800832-10) per Frame Using a 5/32 Allen Wrench

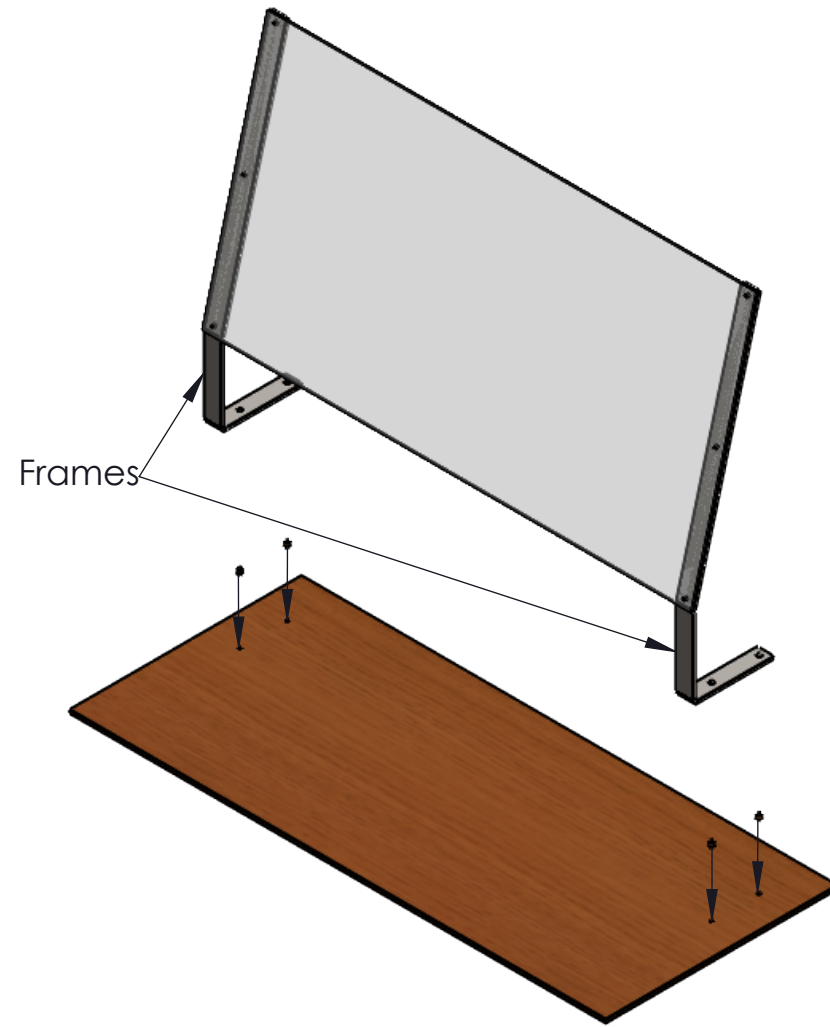


3) Install the Sneeze Guard to the E-Z Hex Flush 8-32x10mm Threaded Inserts (PN: 800832-10) by Performing the Following:

3.1) Remove the Protective Liner on the Double Sided Tape

3.2) Place the Sneeze Guard at the Desired Location and Press the Frame Down Firmly

3.3) Install the Frame to the E-Z Hex Flush 8-32x10mm Threaded Inserts (PN: 800832-10) Using (2) #8-32x1/2" Black Pan Head Machine Screws per Frame

(2) #8-32x1/2" Black Pan Head Machine Screws

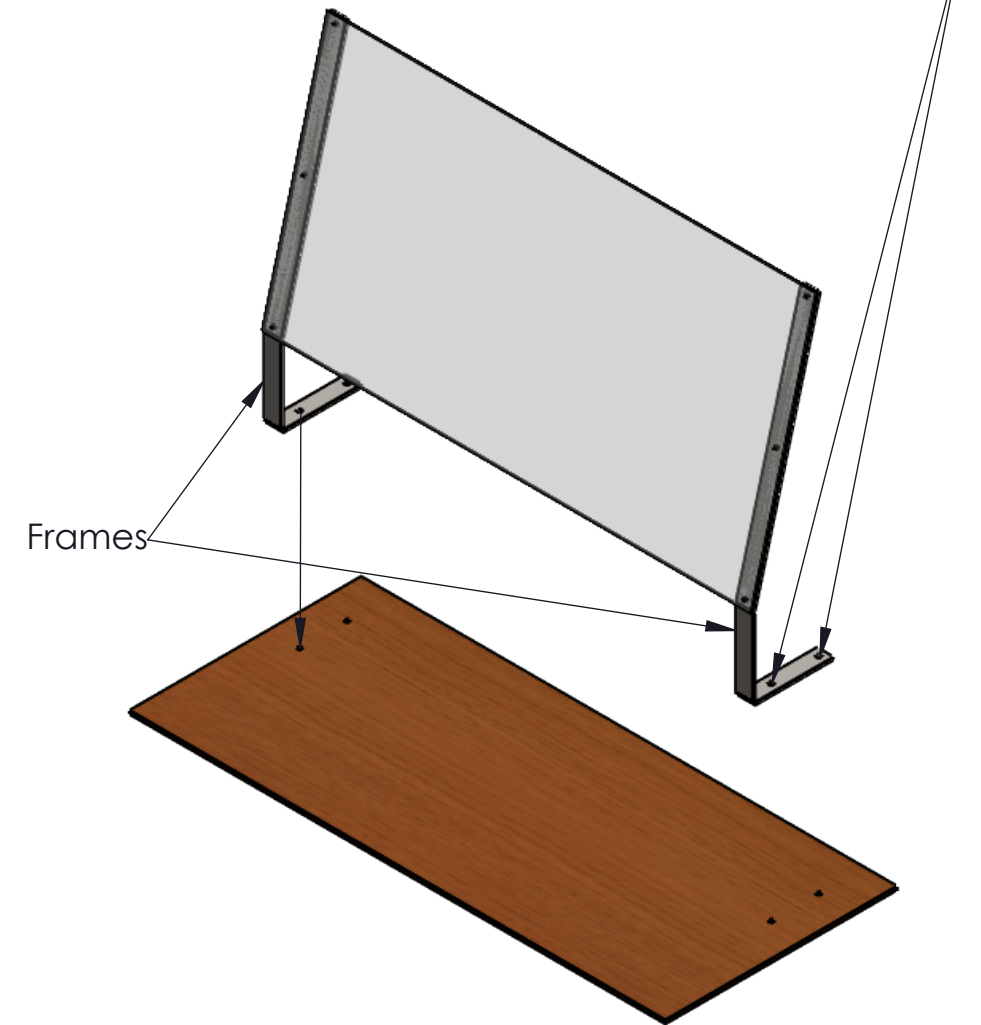

TOLERANCES

UNLESS OTHERWISE SPECIFIED:
 DECI .X ± .030 ANGLE ± 0.5
 .XX ± .010 FRACT ± 1/64
 .XXX ± .005
 ALL WIRE LENGTHS NOMINAL ± .5"

INTERPRET GEOMETRIC TOLERANCING PER:

MATERIAL

FINISH

DO NOT SCALE DRAWING

	NAME	DATE
SALES		
DRAWN BY	patrick.allen	4/28/2020
LAST UPDATED	patrick.allen	4/28/2020

TITLE:
SNEEZE GUARD



SIZE	PART NO.	THEME
B	05-00620-042-00 and 05-00620-052-00-Install	

SCALE: 1:10 WEIGHT: SHEET 4 OF 4

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CREATIVE SURFACES INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CREATIVE SURFACES INC IS PROHIBITED.